



USB3.0 CMOS CAMERA ARTCAM-226IMX-USB3-T2 INSTRUCTION BOOKLET

12.0M Pixels ARTCAM-226IMX-USB3-T2 Series

ARTRAY CO., LTD.
ARTRAY



Contents

1. Attention	- 3 -
2. Introduction	- 6 -
3. Features.....	- 6 -
4. The Product.....	- 6 -
5. Connections.....	- 7 -
6. Specifications.....	- 8 -
6.1. Specifications	- 8 -
6.2. Camera's functions.....	- 9 -
6.2.1. Exposure time	- 9 -
6.2.2. Analog + Digital Gain.....	- 10 -
6.2.3. Black level adjustment	- 10 -
6.2.4. Mirror Reversal	- 11 -
7. Dimensional Outline.....	- 12 -
7.1. ARTCAM-226IMX-USB3-T2	- 12 -
8. Spectral sensitivity characteristics (reference value)	- 15 -
8.1. ARTCAM-226IMX-USB3-T2 (color model)	- 15 -
8.2. ARTCAM-226IMX-BW-USB3-T2 (monochrome model)	- 15 -
8.3. IR Cut Filter (color model only)	- 16 -
8.4. Characteristic of Visible Light Cut Filter	- 16 -
9. System Requirements.....	- 17 -
9.1. Recommended System Requirements	- 17 -



1. Attention

■About this manual

1. Before using the camera, please read this manual thoroughly.
2. Please keep this manual reachable and always refer to the contents when needed.
3. Please contact us if the manual is lost or damaged. We will provide a replacement.
4. We cannot guarantee the safety of improper uses of the camera.
5. For your safety, please follow the directions of this manual.
6. All contents are subject to change.
7. Images in this manual may have been simplified to be easier comprehended.
8. Please contact us if you find any unclear points or mistakes in this manual.
9. Quoting, copying or altering some or all parts of the manual without our permission is prohibited.
10. We are not responsible for any lost or damages on your profits due to the use of our products.
11. Please understand that our oversea branches do not provide maintenance or repair services.

■About the Icons

To keep the safety of the user, other people and their properties, please pay attention to the following icons.



Warning

If the user fails to follow the instruction, serious injury or death may occur.



Caution

If the user fails to follow the instruction, physical injury on human or damages on hardware may occur.



■ For Safe Use



Warning

● In following circumstances, please stop using the product and turn off the power immediately to prevent the risks of fires and electric shocks. If the product is defective, please contact us for repair or exchange. For your safety, please do not disassemble, modify or repair the camera on your own.

Please stop using the product and turn off the power immediately when:

- The product becomes smoky or gets extremely hot on the surface, or makes unusual smells or sounds.
- Foreign material or water gets into the product.
- The product falls and becomes damaged.

● Do not place the product on unstable surfaces. The product may be fallen and people may get hurt.



Caution

● Do not expose the product to steam or fumes to avoid electric shocks and fires.

● Do not leave the product in high temperature places such as inside of vehicles or under direct sunlight. High temperature may cause damages to the camera, or even cause fires.

● Do not cover the product with cloth or other materials. The product may get extremely hot and the heat may cause deformations on the parts or even cause fires.

● Please avoid dropping or shocking the product as the product may be damaged.

● Do not touch the cable with a wet hand. Such action may cause electric shocks.

● Please avoid continuously contacting the surface of the camera to your skin when the camera is being used. The surface temperature of the camera may cause burns.

■ Other Notices

● Please do not use the camera under strong lights such as sun light for a long period. Also please do not expose the camera under strong lights even when the product is not being used because the sensor might be damaged.

Maintenance

● Wipe the dirt on surface with soft cloth or tissue paper. Do not use alcohol, thinner or benzene to avoid damaging the surface paints.



Electro Magnetic Interference

●The camera may interference with electronic devices such as TV and radio. Please do not place the camera next to such equipment.

■Export Control

This product is a Catch-all Control item subject to the Foreign Exchange and Foreign Trade Act and its relevant legislations. Except for exporting to the 26 white countries designated in the Cabinet Order, export licenses are required if the products are going to be used for military use or if the end user of the product is related to all kinds of military activities. If your circumstances cause the need to apply export licenses, please notify us before you place orders. Also, please notify us in advance if the end users or purposes of use change after the purchase and thus cause the need to apply export licenses.

About the Japanese Security Export Controls, please refer to the webpage for Security Export Control Policy, the Ministry of Economy, Trade and Industry:

www.meti.go.jp/policy/anpo/englishpage.html

The above is based on the enforcement laws and regulations at the time of issuance of this document. Please be sure to check the latest laws and regulations before actually exporting this product.

■Guarantee

To save the environment, we do not issue warranty in printed format. Instead, all records of the warranty periods, delivery dates and the customer information are well kept in our system.

For more details, please refer to the following link:

Hardware Warranty: http://www.artray.us/download/artray_warranty.pdf

●We do not guarantee the functions of this product or the descriptions on this manual to be completely adapted to the users' end applications or marketing purposes. We are also not held responsibility for any direct or indirect damages caused by our products under any circumstances.

●Please do not use this product for a task that require high reliability. This product is not manufactured to be used as medical, nuclear, aerospace, transportation equipment or equipment or that is highly related to human safety. We are not held responsibility for any damages on the users' property, equipment or personal safety caused by this product.

■Disposal

●To dispose this product, please return the camera to us. If you decide to dispose the camera without returning it to us, please follow related regulations and have the camera disposed as an industrial waste. Please always keep track of the disposal, and make sure the disposed camera cannot be accessed or used by any third party.



2. Introduction

ARTCAM-226IMX-USB3-T2 series are USB3.0 CMOS cameras that designed for industrial use. Adopting USB3.0 interface, thus enables direct data transfer to PC without a capture card.

3. Features

- USB3.0 Interface

Adopting USB3.0 interface, thus enables direct data transfer to PC without a capture board or a host adapter card.

- Included Viewer Software

ART-Viewer (Windows 7/8/10).

Users can easily preview, save images and change camera settings by ART-Viewer.

- Included Software Development Kit

When developing image processing software, a software development kit that enables you to acquire Camera image acquisition and camera control are possible with other applications is included as standard.

You can also download it from the website below.

http://www.artray.us/download_sdk.html

- 2D Measurement & Filing Software(Optional)

Useful 2D measuring functions are available with the optional 2D Measuring & Filing Software - ART-MEASURE.

4. The Product

- 1) Camera
- 2) USB3.0 Cable (USB3.0 A to micro B Type 3.0m)
- 3) Viewer software and Device driver CD

<Option>


- 1) C Mount Lens
- 2) 2D Measurement & Filing Software <ART-MEASURE>



5. Connections

Please connect the camera and the PC by using the attached USB3.0 cable.

Camera's power is supplied from USB Bus Power.

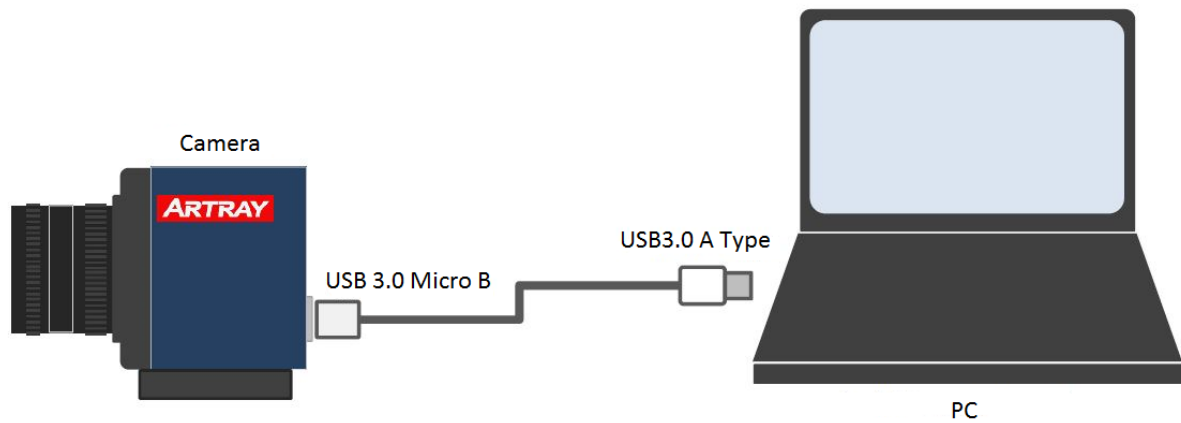



6. Specifications

6.1. Specifications

Items	color	monochrome
Model	ARTCAM-226IMX-USB3-T2	ARTCAM-226IMX-BW-USB3-T2 ARTCAM-226IMX-NIR-USB3-T2
Sensor Type	CMOS Image Sensor	
Model Number	IMX226CQJ	IMX226CLJ
Active Pixels	4072(H) x 3046(V)	
Active Image Size	7.53 (H) × 5.63 (V) mm 1/1.7 Inch	
Scanning mode	Progressive Scan	
Pixel Size	1.85(H) × 1.85(V) μm	
Shutter	Rolling Shutter	
Color Filter Array	RGB Bayer Pattern	Monochrome Pattern
Synchronization Method	Internal Synchronization	
A/D Converter	12bit	
Interface	USB3.0 Bulk Transfer	
Lens Mount	C Mount	
Frame Rate	Maximum 27.9fps (8bit output) Maximum 14.1fps (16bit output)	
Exposure time	1/10000 sec. ~ 0.0352 sec.	
Power-supply voltage	5.0V (± 0.5V) USB Bus Power	
Power Consumption	Approx. 3.3W	
Ambient Conditions	Operating Temperature / Humidity: 0 ~ 35° c / 10 ~ 80% (Non-water vapor condensation state) Storage Temperature / Humidity: 0 ~ 60° c / 10 ~ 95% (Non-water vapor condensation state)	
External Dimensions	50.0(W) × 47.0(H) × 42.7(D) mm ※Exclude lens, tripod mount and projections	
Weight	Approx. 105g ※Exclude lens, tripod mount and projections	



6.2. Camera's functions

6.2.1. Exposure time

The exposure time (electronic shutter speed) of the camera can be set.

The exposure time can be calculated by the following formula:

Exposure time = $((3079 - \text{the setting value of the shutter speed}) * 825 + 201) / 72\text{MHz}$ (Setting range: 8~3075)

The exposure time is 0.048 ms to 35.19 ms

(The software supports from 0.1 ms to 35.2 ms*)

*The setting resolution on the software is in units of 100 μs (0.1 ms), and exposure time will be set to the closest value calculated within the software.



6.2.2. Analog + Digital Gain

Analog gain are installed in the sensor of this camera.


For the set value [0~1957] of the software, the floating range of the gain magnification changes from 0.0 dB to 27.0 dB.

Formula for calculating the gain magnification:

$$\text{Gain [dB]} = -20 \cdot \log\{(2048 - \text{Gain's set value}) / 2048\}$$

Digital gain is fixed at 0 dB (1x)

The relationship between gain set value and magnification [dB] is shown as below:

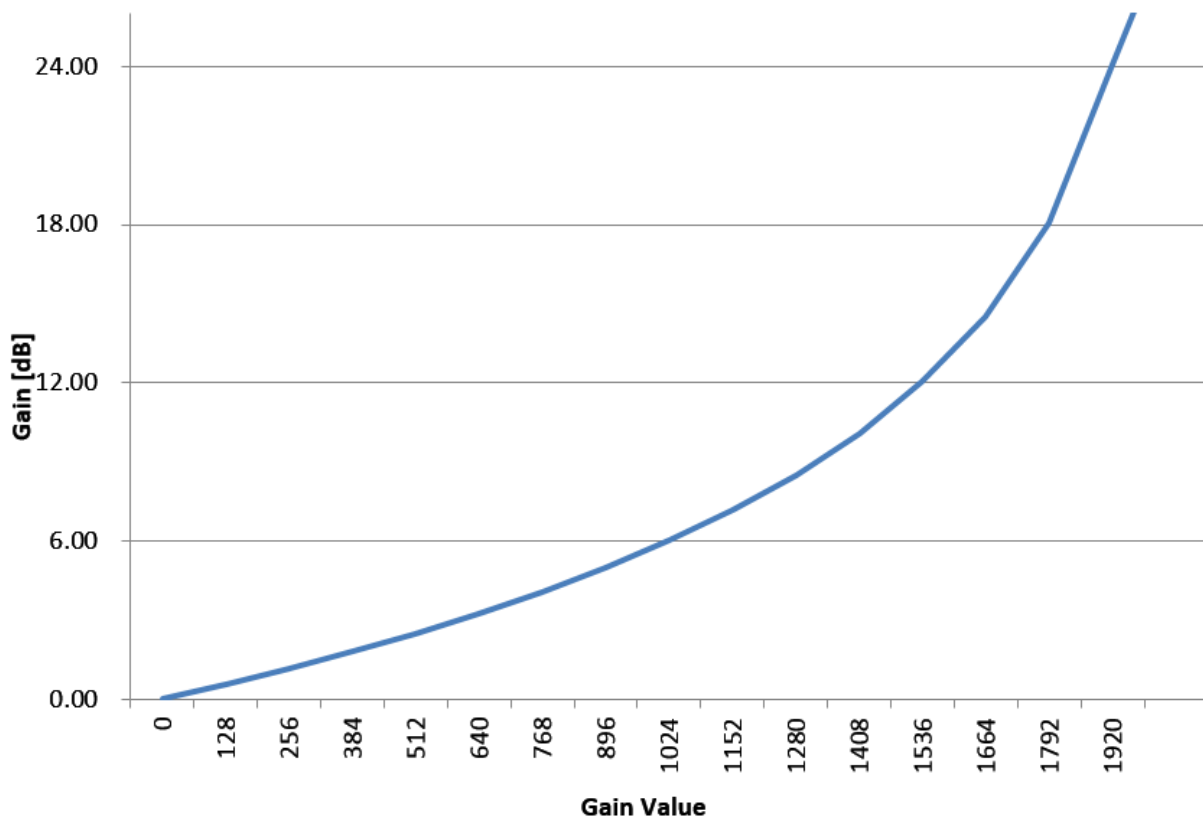

6.2.3. Black level adjustment

As for this camera, offset of the Black level is added to the data where the digital gain is applied.

The initial set value of the black level is 200 when outputting 12bits.

Therefore, the luminosity value (**or [brightness value]**) in a light shaded state will be around 12 when outputting 8 bits (or 24 bits color)

※If you wish to change this value, please contact our sales department.




6.2.4. Mirror Reversal


The sensor utilized in this camera provides horizontal and vertical mirror reversal function.

In a normal position (of no avail to both horizontal reversal and vertical reversal), the lower left corner of the direction in which the front of the camera is oriented is the origin (0, 0).


When horizontally or vertically reversed, the Bayer setting of the software will be automatically converted.

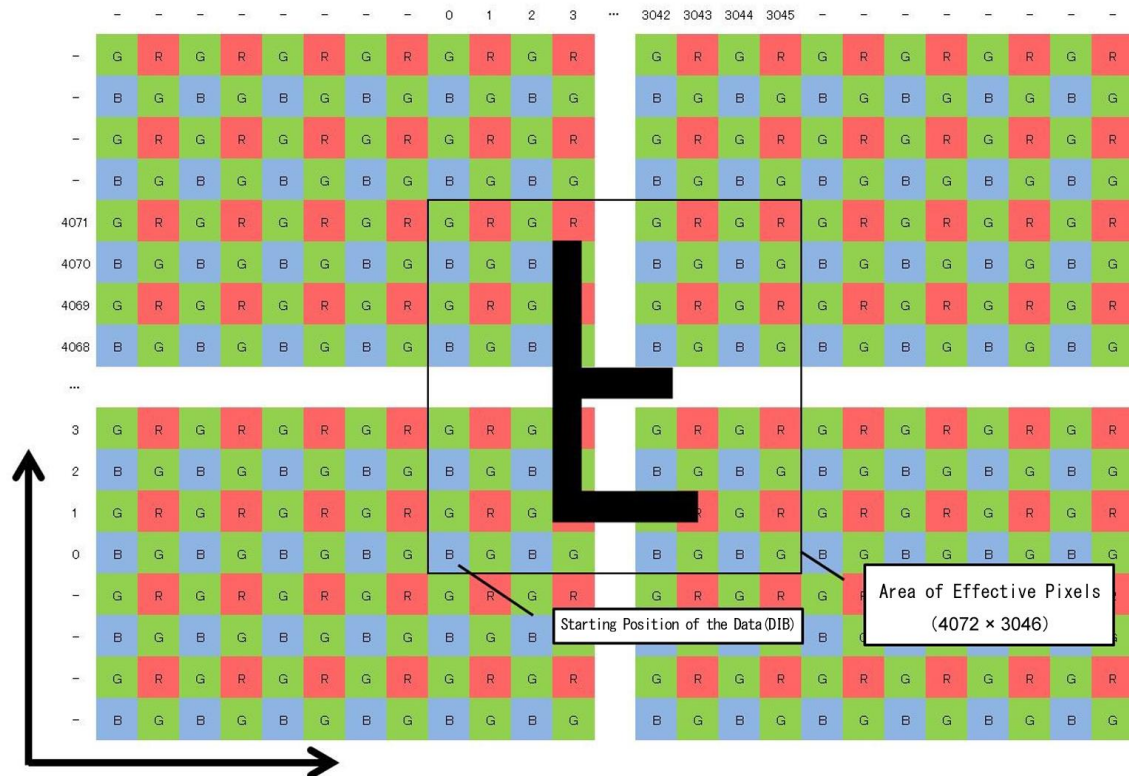


The positional relationship on the optical surface

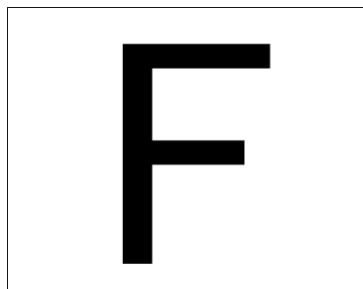


Display on a PC

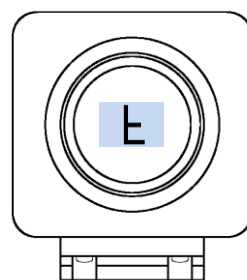


Up and down position of the camera

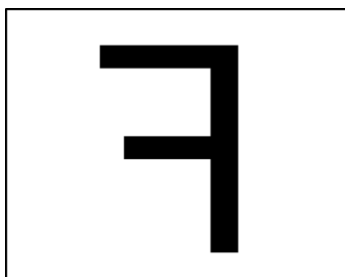

Effective horizontal reversal

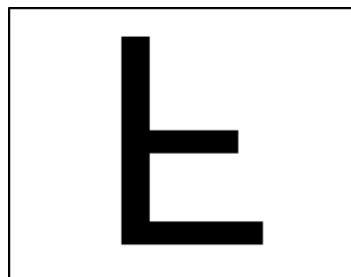

Effective vertical reversal

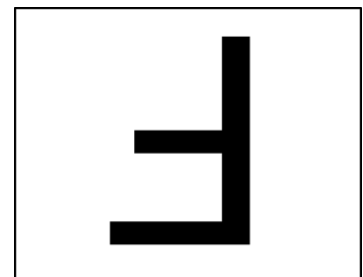


Effective vertical and horizontal reversal



7. Dimensional Outline


7.1. ARTCAM-226IMX-USB3-T2

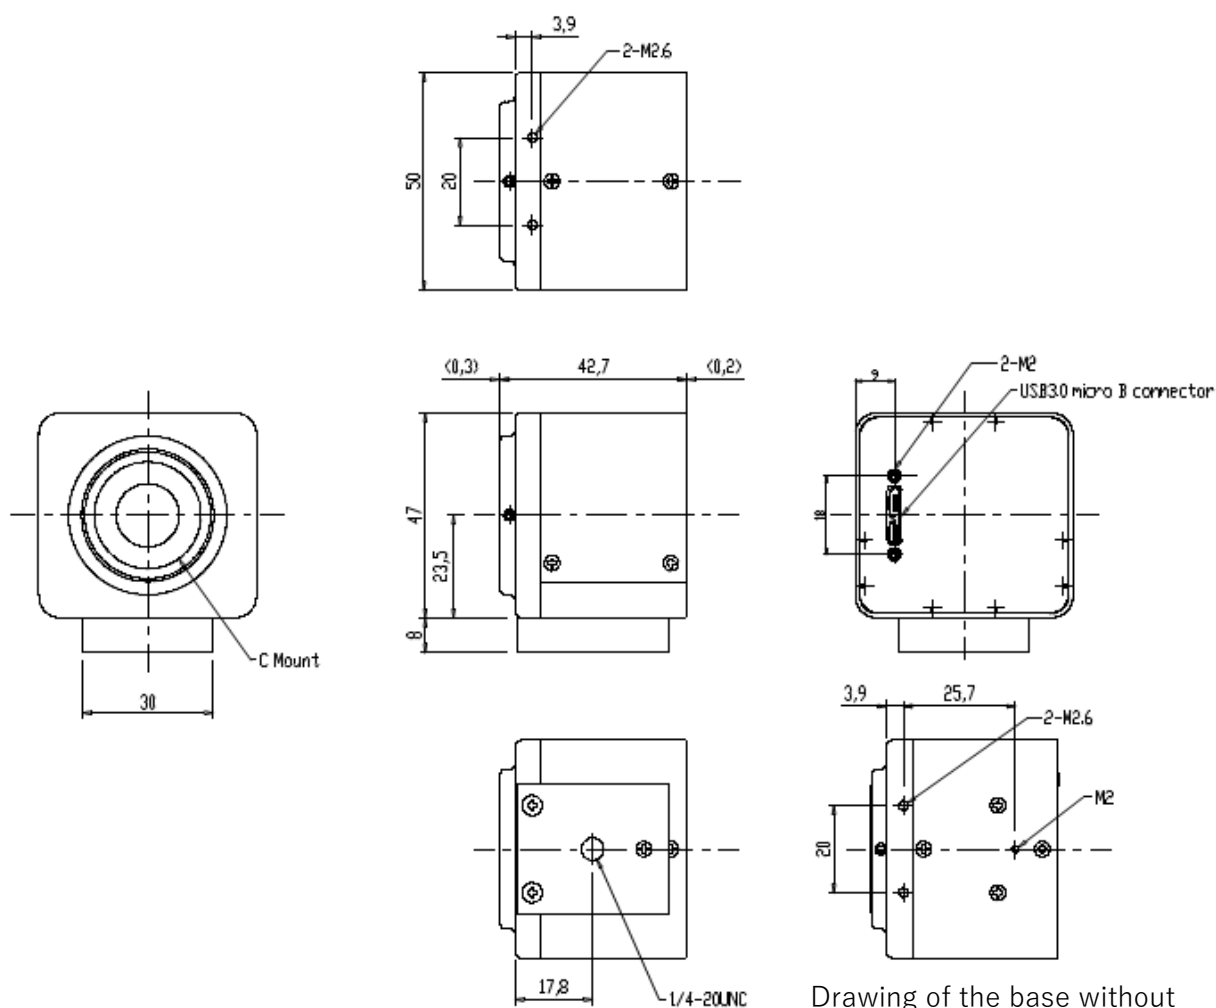


Drawing of the base without
a tripod mount



Illustrations of the relationship between the Mount and the Sensor surface

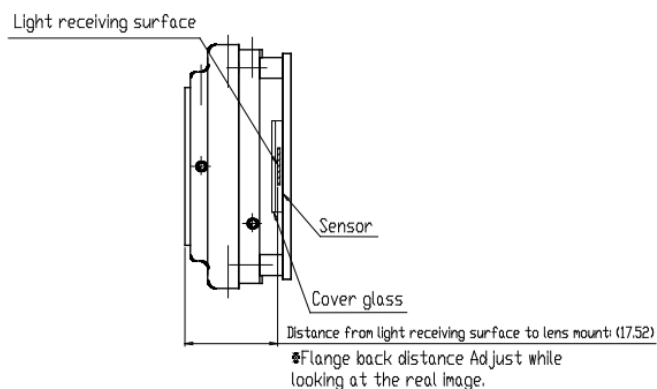


monochrome

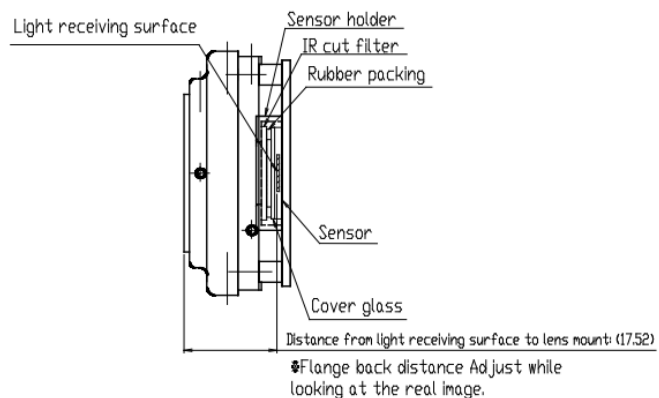


color

The height of the light receiving surface when the PCB Board pasted is mounted

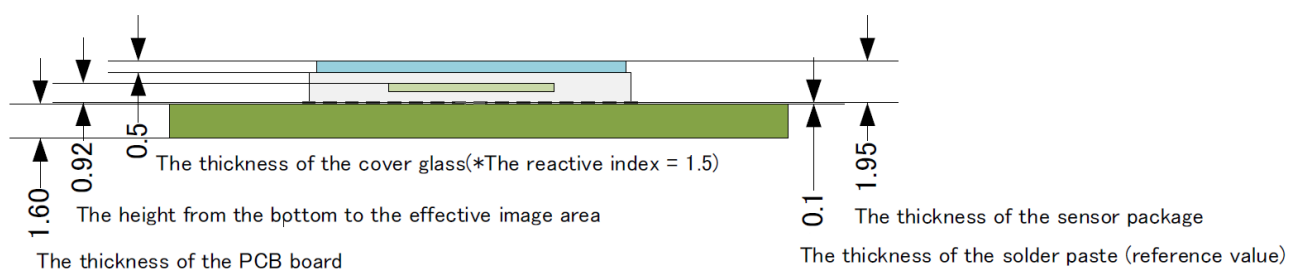


Position Relationship Diagram between the sensor package and the light receiving surface

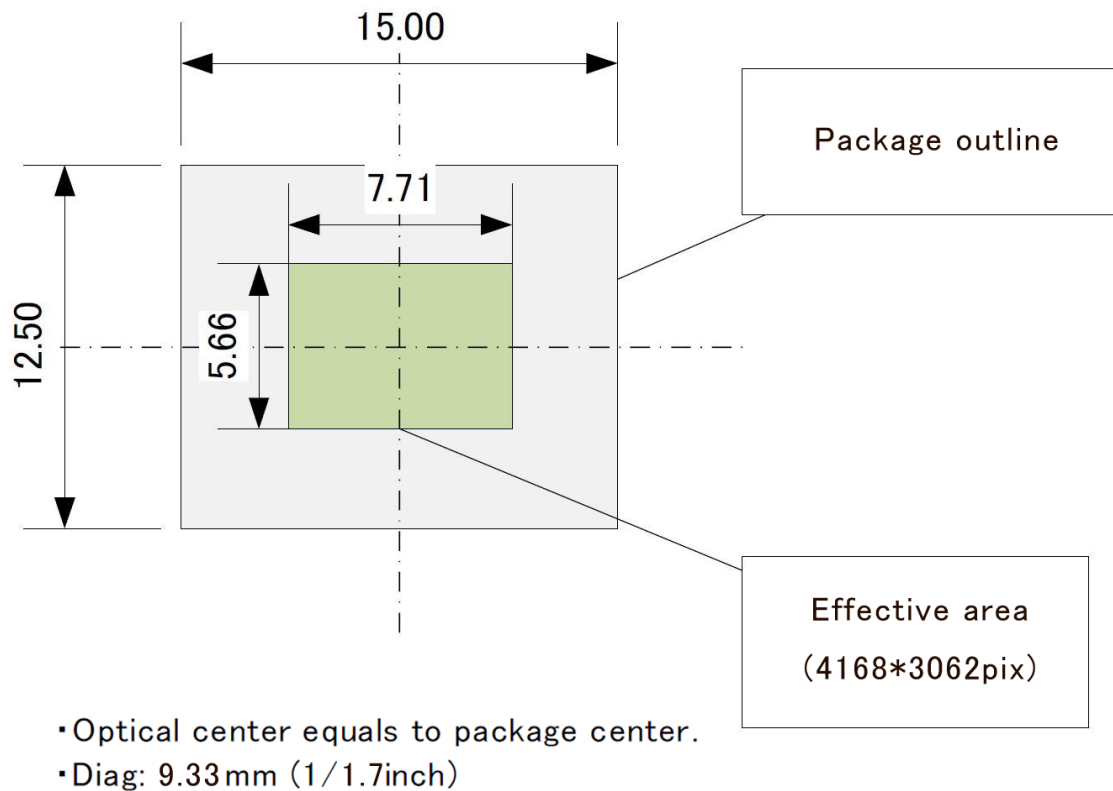

$$H = 1.85[\mu\text{m}] * 4168 = 7710 [\mu\text{m}]$$

$$V = 1.85[\mu\text{m}] * 3062 = 5664 [\mu\text{m}]$$

Field of Vision: Lens versus Sensor (reference value)

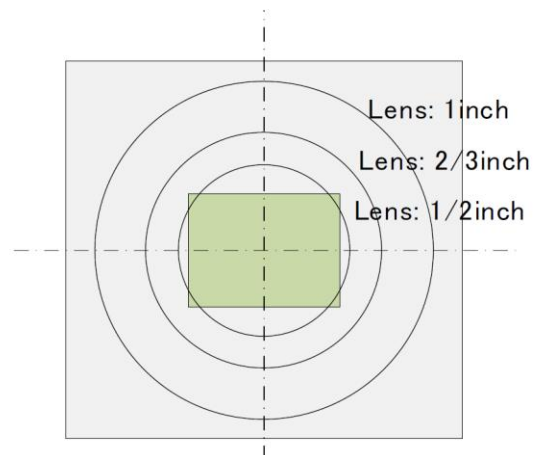

※The ratios of sensor size (diagonal) to lens size in the above illustrations are as follows:


1/2 inch = ϕ 8mm, 2/3 inch = ϕ 11mm, 1 inch = 15.8mm

Please note that the actual field of view varies depending on different lens.




8. Spectral sensitivity characteristics (reference value)

8.1. ARTCAM-226IMX-USB3-T2 (color model)

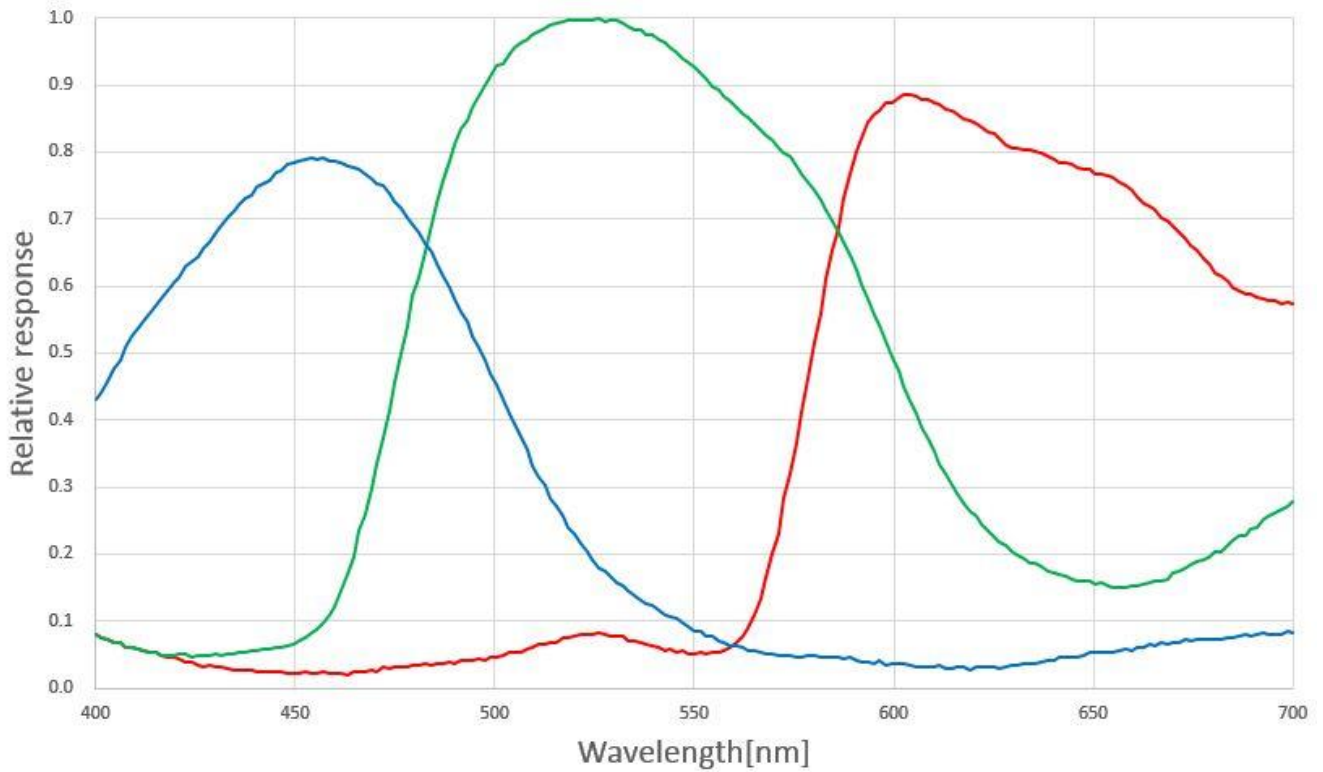


8.2. ARTCAM-226IMX-BW-USB3-T2 (monochrome model)

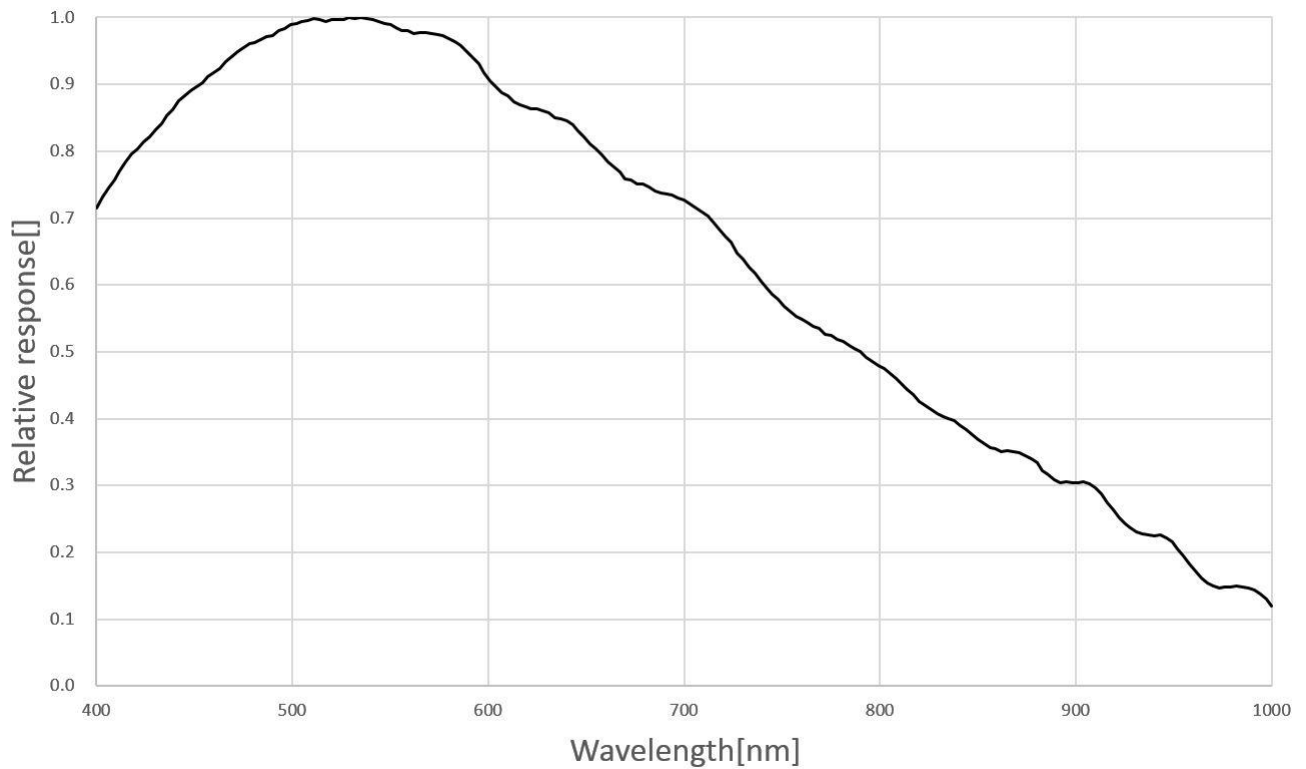




8.3. IR Cut Filter (color model only)

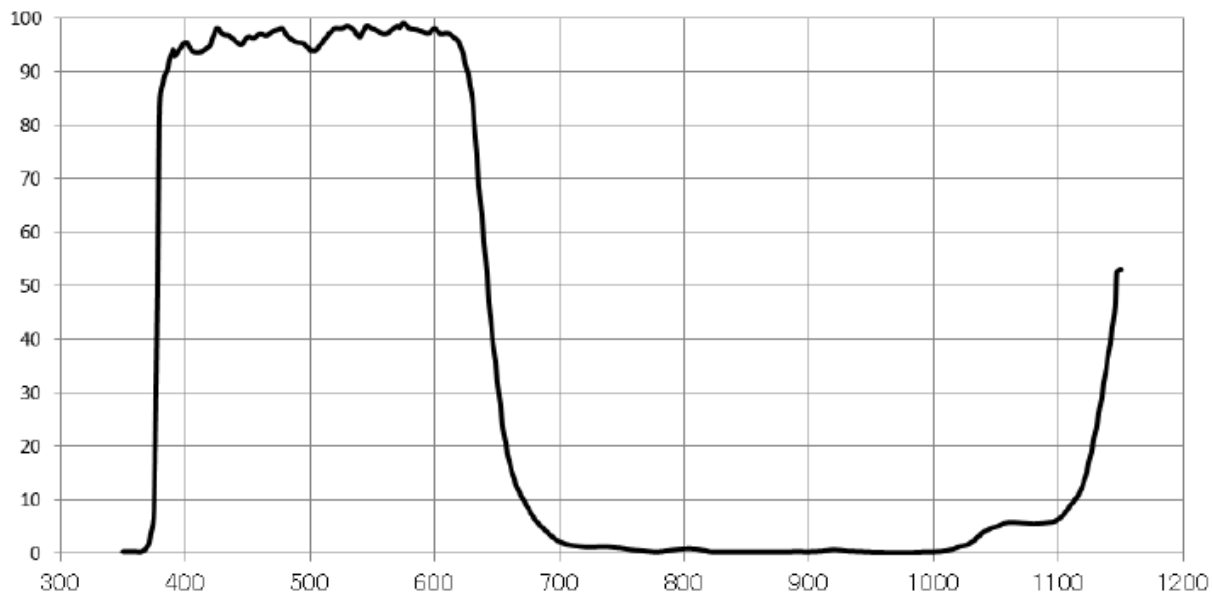

Glass Material: White Board (B270) Reference refractive index 1.52

Thickness: 1.00mm (within a tolerance of $\pm 0.1\text{mm}$)

8.4. Characteristic of Visible Light Cut Filter

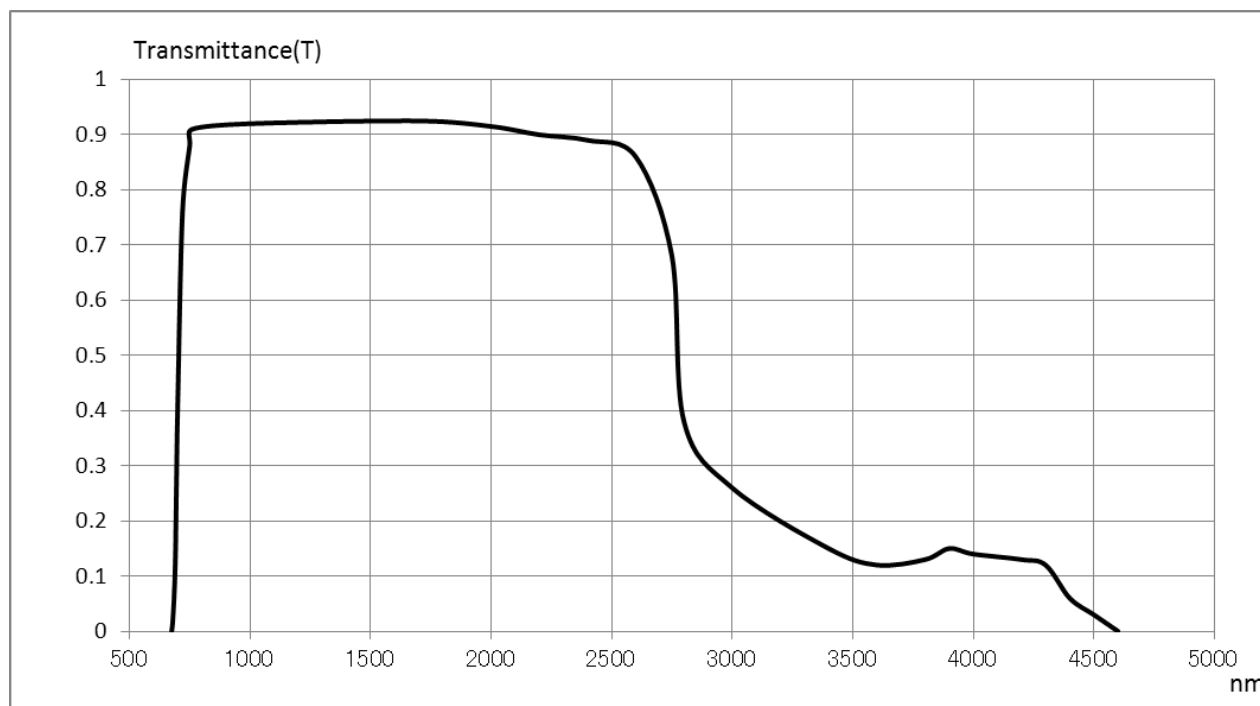

Model Name: R70 Reference refractive index 1.546

Thickness: 2.50mm



9. System Requirements

9.1. Recommended System Requirements

● Host Controller

This camera is applicable to USB 3.0.

Connecting to USB 2.0 host controller may cause low-speed or failure to function properly.

● CPU

The driver of this camera is applicable to computer architecture “x86” or “amd64”.

The specification of CPU effects directly the imaging process speed, therefore it is highly recommended to utilize a high-end CPU if possible.

● Memory

In the viewer software, there is a data buffer which can store 4 to 8 frames.

Therefore, it is necessary to keep spare space at least for 8 frames in the memory.

(For example, when using 1.3MP color camera, $1280 \times 1024 \times 3 \times 8$ [byte] = 30[MB] is necessary.)

It is highly recommended to keep enough memory space especially when using high resolution camera.

● OS

This camera is applicable only to the architecture of Windows NT (32bit/64bit).

Standard functions are confirmed with OS after Windows 7.

In addition, it is recommended to use Windows 10.



Caution

■ Please refer the restrictions below when you use ARTCAM series.

(1) Recommended System Requirements

If the system specifications do not meet the requirements recommended above, it may be difficult to run at the maximum frame rate.

(2) Use of other USB3.0 Hardware

The data on our camera/converter is transferred in bulk mode. For this reason, when using our camera/converter, please avoid using other bulk transferred USB3.0 hardware such as Memory stick, External HDD, External DVD, CDRom etc.

As a solution, we recommend installing a PCI USB host card to the PC and connect external USB hardware to this port only.

(3) USB3.0 Cable Extension

We cannot guarantee the functionality of the USB3.0 camera if the user adopts USB3.0 extension cables or repeaters which are not confirmed by us. With the extension cables or repeaters, the bandwidth of transfer may differ, and thus caused malfunctions such as a low frame rate or recognition failure on the camera.

What may cause the problem is that the regulation of the power lines becomes not enough, and so causes impedance mismatch on data signals.

*For the recommended extension cable, please contact our sales department.

(TEL: +81-3389-5488)

ARTRAY CO., LTD. Obtained ISO 9001: 2015 2018/9/17

1-17-5 Kouenjikita, Suginami-ku, Tokyo 166-0002 Japan

Tel: +81-3-3389-5488 Fax: +81-3-3389-5486

Email: sales@artray.us URL: www.artray.us

ARTRAY