#### NANOSECOND LASERS

NL200 • NL230 • NL300

海纳光学 <sup>电话: 0755-84870203</sup> 邮箱: sales@highlightoptics.com NL200 SERIES



### BENEFITS

- Continuous tuning of repetition rate while maintaining constant pulse energy, superior beam pointing and energy stability make the laser the first choice for micromachining, marking, thin film removing applications
- Close to Gaussian smooth beam profile with low value M<sup>2</sup> < 1.3 and good focusability is beneficial for such applications, as LCD and OLED display repair
- Compactness and lightness make a laser easy transportable, saves on valuable laboratory space

NL200 series DPSS air-cooled nanosecond lasers offer high pulse energy at kHz repetition rates. End-pumped design makes this laser compact and easy to integrate into various laser equipment both industrial and R&D. Featuring short nanosecond pulse duration, variable repetition rate and external TTL triggering, nanosecond diode pumped NL200 series Q-switched lasers are excellent and cost-effective sources for specific applications, when higher pulse energy is required, like material processing, LCD and OLED

- Fast wavelength selection is superior for applications where alternating wavelengths are required, like material ablation, LIBS
- Air cooling, cheap and reliable end-pumping technology, amplifiers free DPSS design guarantee easy operation and alignment of laser, simple installation and low life-time ownership cost
- Variety of control interfaces USB, RS232, LAN, WLAN ensure easy control and integration of laser with laboratory or OEM equipment

display panel repair, ablation, marking, engraving, laser cleaning, laser deposition and many more.

This laser can be equipped with harmonic generation modules for 532 nm, 355 nm, 266 nm and 213 nm wavelengths. Excellent energy stability and a wide range of wavelength options make this laser a perfect tool for spectroscopy, photoacoustic imaging and remote sensing applications. The mechanically stable and hermetically sealed design ensures reliable operation and long lifetime of the laser components. World leading reliability


# Compact Q-switched DPSS Lasers

### FEATURES

- Customers recognized reliability
- Two years warranty
- Up to 4 mJ pulse energy at 1064 nm
- Up to 2500 Hz variable repetition rate
- 532 nm, 355 nm, 266 nm, 213 nm wavelengths as standard options
- <10 ns pulse duration at 1064 nm</p>
- ▶ Electro-optical Q-switching
- Turn-key operation
- Rugged sealed cavity
- Compact size
- Simple and robust
- Air cooled
- External TTL triggering
- Remote control via keypad and/or any controller running on any OS using REST API commands

### APPLICATIONS

- Material processing
- LCD and OLED display panel repair
- Marking
- Micromachining
- Engraving
- Laser deposition
- Laser cleaning
- Ablation
- Spectroscopy
- OPO pumping
- Remote sensing



NANOSECOND LASERS


# NL200 SERIES

## SPECIFICATIONS<sup>1)</sup>

Model <sup>2)</sup>	NL201 <sup>3)</sup>	NL202 4)	NL204 4)
Pulse energy			
at 1064 nm	0.9 mJ	2.0 mJ	4.0 mJ
at 532 nm	0.3 mJ	0.9 mJ	2.0 mJ
at 355 nm	0.2 mJ	0.6 mJ	1.3 mJ
at 266 nm	0.08 mJ	0.2 mJ	0.6 mJ
at 213 nm	0.04 mJ	0.1 mJ	0.2 mJ
Pulse to pulse energy stability (StdDev) <sup>5)</sup>			
at 1064 nm		<0.5 %	
at 532 nm	<2.5 %		
at 355 nm	<3.5 %		
at 266 nm	<4 %		
at 213 nm	<5 %		
Typical pulse duration <sup>6)</sup>	7 – 10 ns		
Power drift 7)		± 2 %	
Pulse repetition rate	0-2500 Hz	0-10	000 Hz
Beam spatial profile	close	to Gaussian in near and far f	fields
Ellipticity		0.9–1.1 at 1064 nm	
M <sup>2</sup>		<1.3	
Beam divergence <sup>8)</sup>		<3 mrad	
Polarization	linear		
Typical beam diameter <sup>9)</sup>	0.7 mm		
Beam pointing stability (RMS) <sup>10)</sup>	≤10 µrad		
Optical jitter (StdDev) <sup>11)</sup>		<0.5 ns	
	1		
		164 220 02	
Laser head (W $\times$ L $\times$ H) <sup>12)</sup>	164 × 320 × 93 mm		
Power supply unit (W × L × H)		470 × 390 × 140 mm	
Umbilical length		3 m	
OPERATING REQUIREMENTS			
Cooling		air cooled	
Ambient temperature		18-30 °C	
Realtive humidity		20-80 % (non-condensing)	
Power requirements	100-	240 V AC, single phase, 50/6	i0 Hz
Power consumption		<600 W	
Cleanliness of the room		not worse than ISO Class 9	
Due to continuous improvement, all specifications are subject to change. Parameters marked typical are illustrative; they are indications of typical performance and will vary with each unit we manufacture. Unless stated otherwise all specifications are measured at 1064 nm and maximal pulse repetition rate and for basic system without options.	<ul> <li>Averaged from pulses emitted dur time interval.</li> <li>FWHM at 1064 nm.</li> <li>Measured over 8 hours period aft warm-up when ambient temperat is less than ± 2 °C and humidity </li> <li>Full angle measured at the 1/e<sup>2</sup> lev 1064 nm</li> </ul>	er 20 min ure variation ± 5%.	VISIEL AND/OR INVOLUE LASE PA ANOD EP OF SIXIN EMPOSITE EI LASE PA ANOD EP OF SIXIN EMPOSITE EI DI REFLICTED OR SIXITEED RADANDO HURLS (10 AU DEL) AUSTA (10 AU DEL) AUSTA (10 AU DEL) AUSTA (10 AU DEL)
Please indicate clearly if 1064 nm output is required in case harmonics options are ordered (except H200STHC module). In such a case, the energy of 1064 nm is optimized for harmonics generation and may differ from specified in the table.	<ul> <li><sup>9)</sup> Beam diameter is measured at 106 1/e<sup>2</sup> level.</li> <li><sup>10)</sup> Beam pointing stability is evaluate movement of the beam centroid i plane of a focusing element.</li> </ul>	rd as n the focal	
Unless stated otherwise all specifications are measured at 2500 Hz pulse repetition rate.	<ol> <li>With respect to QSW IN or SYNC</li> <li>Without optional harmonic modul</li> </ol>		
Unless stated otherwise all specifications are			

•••		
*	EKSPLA	


29




NANOSECOND LASERS


### PERFORMANCE

**OUTLINE DRAWINGS** 

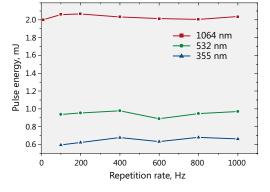

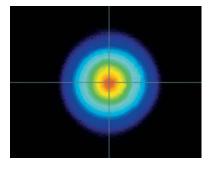

**NL200** SERIES



*Fig 2.* Typical beam intensity profile in the far field

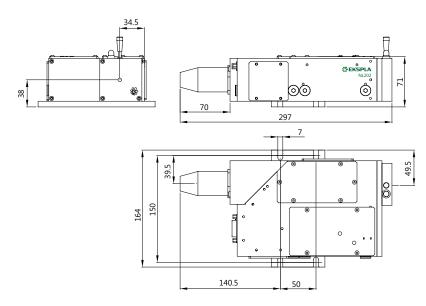


Fig 3. NL202 laser head drawing

### ORDERING INFORMATION

Note: Laser must be		
connected to the mains		
electricity all the time. If there		
will be no mains electricity for		
longer that 1 hour then laser		
(system) needs warm up for a		
few hours before switching on.		

### NL201-H200SHC

Model	Harmonic generator options:
	H200SHC $\rightarrow$ second harmonic
	H200THC $\rightarrow$ third harmonic
	H200FHC $\rightarrow$ fourth harmonic

